SD LASER SHOW SYSTEM

MODEL Cronus

User Guide

hank you for purchasing this product, Please read user guide for safety and perations before using. Keep this manual for future reference. This product an create perfect laser programs and effects since it has passed a series of trict test before delivery.

once after received this product, please take and put carefully. And check autiously that whether the product was damaged or not during the ansportation.

'echnical Specifications

.Power Supply: AC 100-240V()

Laser:Red 240mw Green 120mw

.Rated Power: 50W

. Working Mode: Sound Active/Auto-play/DMX512/Master-Slave

.Control Signal: DMX512 Signal

.DMX Control Channels: 10 Channels

.Operating Temperature: -1° -- 35°

.Storage Temperalure: -10° -- 60°

.Warm -Up Time:<15min

.Laser Classification:3b

0.Modulation:TTL

thecking Parts lease check if the following parts are included:

x Laser Light

x Power cable

x User manual

SD Card

langer Laser Radiation!

.void direct eye exposure!

aser radiation can cause eye damage or skin damage

.ll protective measures for a safe operation of this laser must be applied.

Attention

.Must operate according to the user manual.Don't separate the light ersonally. Calllthe technician when the machine breaks down.

.Please do not see the laser beam directly to avoid any damage.

.Before connect or disconnect the power, please adjust the luminance of the iser diode to the least to avold any damage to the laser diode.

.This unit should be keep dry, do not use in the rain and dusty environment.It an be use in the outdoor with the water-proof cover protector.

.Set the light immobility and try to avoid strong shake or hir.

.Prevent dust into the equipment to avoid problems.

.Please keep that there's no other equipment or decorating materials bstructed the exhaust fan and the vent-pipe when the equipment was orking.

.Before connect power, check the plug is immobility or not, power line should e connect well.

- 9. Please do not open or close the equipment frequentiy that's to avoid any affect to the life span of the laser diode, and try the best to avoid the long time working.
- 10. Due to the characteristic of the laser diode, after four hours working, it should be close at least 25 minutes until the laser diode cooling then work again.
- 11.Don't touch the light or draw the power line when your hand was wet. And do not pull the electronic power line.
- 12. Maintain the distance at least 10M above from the equipment to the object.
- 13. This equipment does not have any parts can repair for the users. please do not open the equipment.
- 14. When the laser diode became dim or damaged please contact the dealer timely.
- 15. To use the original package when transport again and to avoid shake.

Installation

- 1. Please check the voltage whether is the same with the one showed on the equipment or not.
- 2. It must ask for the technical person and set the light safety when installation. And let the light beam at the suitable angle.
- 3. When install this equipment piease make sure there's no flammable surfaces (decorated things, etc) within at least 2.5M and maintain minimum distance of 0.5M from the equipment to the walls.
- 4. Please make sure that there's no other equipment or decorating materials obstructed the exhaust fan and the vent-pipe.
- 5. Products should be install immobility.
- 6. In case of safety, it's very important that to connect the earth with line.

SD Card Laser Light Control System

I .First: K	Cey Operat	e	
			(.)
MODE	DOWN	UP	ENTER

Asthefigureshown:

Mode is MenuKey, ENTER is ensure key, UP s flip, DOWN is next. After opening, Machine state is saved when the last shutdown state, This time, Press MODE key to exit the mode selection menu, LCD.

First line display" mode select ", The second line display Operate Mode: Program Table

Key Seek

Audio Mode

DMX Mode

Auto Mode

Slave Mode

System set can set color mode, Audio senor effect, X/Y phase System Set working file set Repeat press" MODE "key jump to the working mode you want, press" ENTER "key ensure.

Mode State and operate

- 1. Program Table: LCD first line display "SD Program Show", Second line display current list of player names, that time, press "UP" and "DOWN" select play list.
- 2.Key Seek: LCD first line display "Show File", Second line display current play ILDA file document name, that time, press "UP" and "DOWN" select ILDA file.
- 3.Audio Mode: LCD first line display "Audio show", Second line display System Development Company Name "Aurora Studio", that time, play card interior integrated program, the rhythm and the sound effect changed by the environment
- 4.Auto Mode: LCD first line display "Auto Show", Second line display System Development Company Name "Aurora Studio", that time, play card interior Integrated program.
- 5.DMX Mode: LCD first line display current DMX address, press "UP" address Add 1, press "Down" address Subtract 1, continuously press "UP" or "DOWN" Will fast continuously change. When adjust to required "DMX" address, press "ENTER" ensure.
- 6. Slave Mode: At this time play state according Master mode change to change
- 7. System set:LCD first line display "System Set", Second line display setting parameters, that timecontinuously press "UP" or "DOWN" select required setting parameters, then press "ENTER" ensure, "Color Mode Set" color mode setting, "Audio Set " audio effect setting, "Phasic Set" phase setting.
- 8. Folder set: LCD first line display "Folder Select", Second line display folder name, press "UP" or "Down" to required folder, press "ENTER" ensure.

I. Second: Channel Description

	m. Second. Chamier Description				
Channel Description					
	Channel	Value	Control Description		
1	Mode Select	0-73	Light Shut Off		
		74-110	PRG Mode		
		111-147	ILD Mode		
		148-184	Audio		
		185-221	Auto		
		222-255	Manually Mode		
2	Graphic/	0-255	Manually Mode	PRG/ILD Mode	
	Folder Select	0-233	Graphic change, per 2 value is one graphic	Folder select	

				
	Strobe/	0-10	Without Strobe	
3	Folder Select	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Auto Strobe	Play file select
		200-255	Audio Strobe	
4		0-125	Manually adjust location	
	moving	126-185	Auto left and right cycle mov	/e
		186-225	Auto jump left and right cycl	e move
		226-245	Auto without rule jump	
		246-255	Audio without rule jump	
5		0-125	Manually adjust location	
	moving	126-185	Auto up and down cycle mov	e
		186-225	Auto jump up and down cycle	e move
		226-245	Auto without rule jump	
		246-255	Audio without rule jump	
6	Zooming	0-10	Without zooming	
		11-100	Manually adjust the size	
,		101-15	Enlarge	
		151-200	Shrink	
		201-255	Cycle Shrink	
7	Around X-axis	0-10	Without rotating	
	lotating	11-110	Manually adjust	
		111-255	Auto rotating	
8	Around Y-axis	0-10	Without rotating	
	rotating	11-110	Manually adjust	
		111-255	Auto rotating	
9	Around Center	0	Without rotating	
	rotating	1-180	Manually adjust	
		181-217	Auto clockwise rotating	
		218-255	Auto counterclockwise rota	ating
10	Drawing	0-10	Without change	
	and the state of t	10-74	Manually adjust rotating	
		75-104	Auto drawing (Add)	
		105-144	Auto drawing (Subtract)	

		225-255	Auto end to end drawing (Subtract)
1	1 Waving		Without waving
		10-199	
		200-255	
	Color		
		0-16	White
	D.C.D	17-33	Red
	RGB	34-50	Green
		51-67	Blue
		68-84	Yellow
1.0		85-101	Violet
		102-118	Cyan
		119-135	White, red, green, blue four color partition
		136-152	
		153-169	White, red, green, blue, yellow, violet, cyan, seven color partition
	·	170-186	White, red, green, blue four color flow
	·	187-203	Blue, yellow, violet, cyan four color flow
12		204-220	Blue, yellow, violet, cyan four color flow
		221-237	According breakpoint partition display
		238-255	Audio discolor
	RGY	0-27	White
	•	28-55	Red
		56-83	Green
		84-111	Yellow
		112-139	Red, green double color partition
		140-167	White, red, green, blue four color partition
		168-195	Red, green double color flow
	ł	196-223	White, red, green, blue four color flow
		224-255	Audio discolor
3	Display Mode	0-63	Normal display
		64-127	Highlights display
		128-191	Partition display
	·	192-255	Point display

II.Third: Attention

- 1. This system only support FAT32 file system, if use a new SD Card, first formatted as FAT32 format.
- 2. This system only support short file name, file name (including folder name) maximum of 8-bit file name and 3-bit extend name, file name and extend name composed by letters, numbers and underscores. File name can't surpass 8-bit, without Chinese characters, if not system can't identification.
- 3.SD Card need profile card private, don't mixed store with other file, maximum can support 100 folder, every folder maximum can store 255 file. 4.Program list: User can use Text editor (Notepad) edit program list, its extend name is .PRG. Program list composed by play file name, play speed, play time, the middle with "," separated. Every line edits one program item. For example one program composed by three files file1.ild, file2.ild, file3.ild., File1.ild pay speed is 12K, repeat play three times, file2.ild play speed is 20K, play one time, file3.ild play speed is 18K, play four times.

So prgl.prg content as follows:

File1.ild,12,3 File2.ild,20,1 File3.ild,18,4

When create one folder, need to create a folder under the file folder with the same name as the PRG file, and put the folder in all the required documents to the PRG file editing, at this time edited play speed is the play speed of "Key seek" mode, For example, blow aurora folder create one aurora.prg file.

After add ILDA file, needadd this file to prg file, in order to correctly find this file when we select play file on the keyboard, and play the file with you required speed.

5. This system support file is standard ILDA format file, that is meaning extend name is ILD file.

Maintenance

Maintenance should be performed every 15-day period, by using a sponge which is dipped with alcohol,rather than wet cloth or other chemical liquid, to clean the mirror.

Always disconnect from the mains when the device is not in use or before cleaning it.

Warning

Power must be disconnected before main tenar ce or repair Do not look at the light source directly

Note

Don't separate laser machine from laser power and repair them by yourself, otherwise no good repair service will be supplied.

Declaration

This device has left our premises in absolutely perfect condition in order to maintan this condition and to ensure a safe operation, it is absolutely necessary forthe user to follow the safety instructions and warning notes written in this user manual.

We cannot be made liable for damages caused by incorrect installations and unskilled operation!

Page 6